

Security Management System User Management

Introduction

Security Management System Server supports user management configuration, assign devices which user can access, assign alarms which user can receive and features that user can access through privilege configuration.

This document describes steps to configure device groups, alarm groups, privileges, users and assigning device and alarm groups to specific users as per requirement.

Device groups - Grouping of video devices, audio devices and security devices. User which connects to server through Security Management System client will only see devices configured in device groups, device groups will be assigned to user through privilege configuration.

Alarm groups - Grouping of alarms, User will only receive alarms configured in alarm group, alarm group will be assigned to user through privilege configuration.

Privilege – Configuration of allowed features to user, assigning device groups and alarms group.

User – Configuration of username, password and privilege assignment to user. This information will be used to login from Security Management System client.

For this document we will be using Security Management System server configured with two cameras 'Gate 1' and 'Gate 2' as shown in image below.

The screenshot displays the 'Video devices -- Channels' configuration window. On the left, a sidebar menu lists various system components, with 'Channels' under 'Video devices' highlighted in yellow. The main area shows a table of configured channels:

Sr No.	Channel Name	Camera Status	Channel ID	Description	Video Stream
1	Gate 1	Enabled	VC_Cam1516	Gate1	Video Clip
2	Gate 2	Enabled	VC_Cam1517	Gate2	Video Clip


Below the table, a 'License information' section provides the following data:

	VMS channels	VA add-on
Licensed	64	64
Used	2	0
Balance	62	64

Configuring Device groups

To configure device groups, navigate to 'Device groups' tab and 'Groups' sub tab in left navigation bar as shown in image below.

Device groups consists of video devices, audio devices and security devices configured in server.

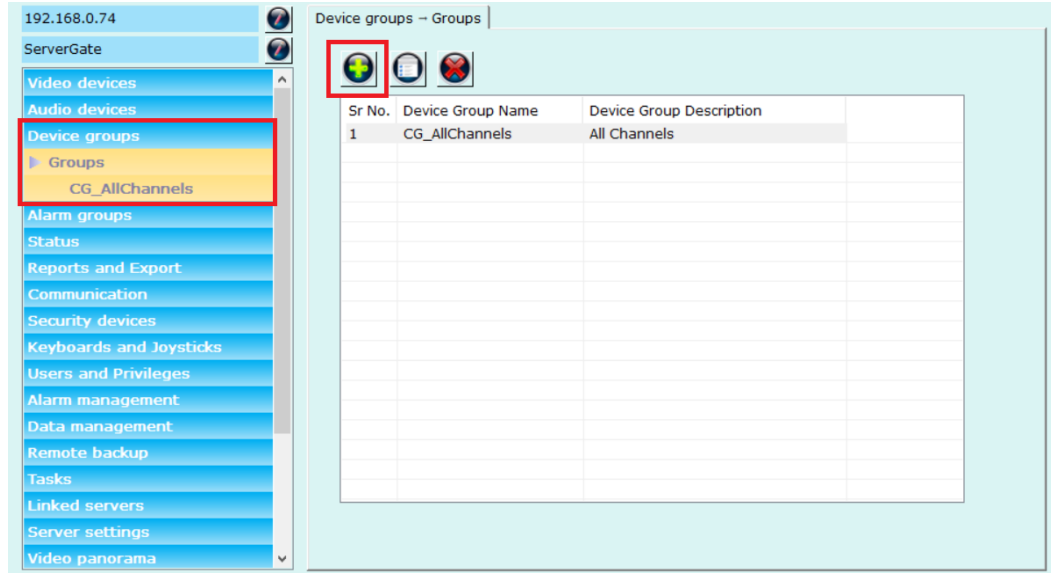

Security Management System provide 'CG_AllChannels' device group as in-built device group which consists of all video devices, audio devices and security devices configured in server.

To configure new device group, click on 'Add new device group...' button.

Add Camera Group

Group name: CG_ Gate1

Group description: Gate2

Devices in group

Device name	Device t...	Device description
Gate 1	Video	Gate1

Devices not in group

Device name	Device t...	Device description
Gate 2	Video	Gate2

Exclusive device selection

Type any string for group name, we are using 'Gate1' as we device group name for this example.

Move devices which needs to be in this group from 'Devices not in group' list to 'Devices in group' using selection buttons shown in image above.

We have selected video device 'Gate 1' for this example.

Click 'Save device group' button to complete device group configuration.

Use 'Exclusive device selection' checkbox to exclude device which are already configured in other device groups.

Device group with name 'CG_Gate1' will be configured and added to server software as shown in image below.

192.168.0.74
ServerGate

Video devices
Audio devices
Device groups
Groups
CG_AllChannels
CG_Gate1
Alarm groups
Status
Reports and Export
Communication
Security devices
Keyboards and Joysticks
Users and Privileges
Alarm management
Data management
Remote backup
Tasks
Linked servers
Server settings

Device groups - Groups

Sr No.	Device Group Name	Device Group Description
1	CG_AllChannels	All Channels
2	CG_Gate1	Gate1

Configuring Alarms Groups

Security Management System server supports configuration of multiple alarms groups.

To configure alarm group, navigate to 'Alarm groups' tab and 'Groups' sub tab in left navigation bar.

Sr No.	Alarm Group Name	Alarm Group Description
1	AG_AllAlarms	All Channels
2	AG_NoAlarms	No Channels

Security Management System provides two in-built alarm groups. These two alarms group cannot be edited or deleted.

AG_AllAlarms - Alarm group with all alarms.

AG_NoAlarms – Alarm group with no alarm.

To add new alarm group, click on 'Add new alarm group...' button.

Add new alarm group

Group Name: AG_ AlarmGroupGate1

Group Description: AlarmGroupGate1

Alarms in group

alarm name
Intrusion
Line crossing
Wrong direction movement

Alarms not in group

alarm name
Unattended Object
Motion detection
Device alarm
Security device alarm
Video signal loss

Exclusive alarm selection

Type any string for group name, we have used 'AlarmGroupGate1' for this example. Move alarms from 'Alarms not in group' list to 'Alarms in group' using selection buttons.

We have selected 'Intrusion', 'Line crossing' and 'Wrong direction movement' for this example.

Use 'Exclusive alarm selection' checkbox to exclude alarms which are configured in other alarm groups from 'Alarms not in group' list.

Click 'Add Alarm group' button to complete the alarm group configuration.

Alarm group with name 'AG_AlarmGroupGate1' will be configured and added to server software as shown in image below.

192.168.0.74
ServerGate

Video devices
Audio devices
Device groups
Alarm groups
Groups
AG_AllAlarms
AG_NoAlarms
AG_AlarmGroupGate1
Status
Reports and Export
Communication
Security devices
Keyboards and Joysticks
Users and Privileges
Alarm management
Data management
Remote backup
Tasks
Linked servers


Alarm groups – Groups

Sr No.	Alarm Group Name	Alarm Group Description
1	AG_AllAlarms	All Channels
2	AG_NoAlarms	No Channels
3	AG_AlarmGroupGate1	AlarmGroupGate1

Configuring Privilege

Privilege will be used to configure access to features assign device groups and alarm groups to user.


To configure new privilege, go to 'Users and Privileges' tab and 'Privileges' sub tab in left navigation menu bar.

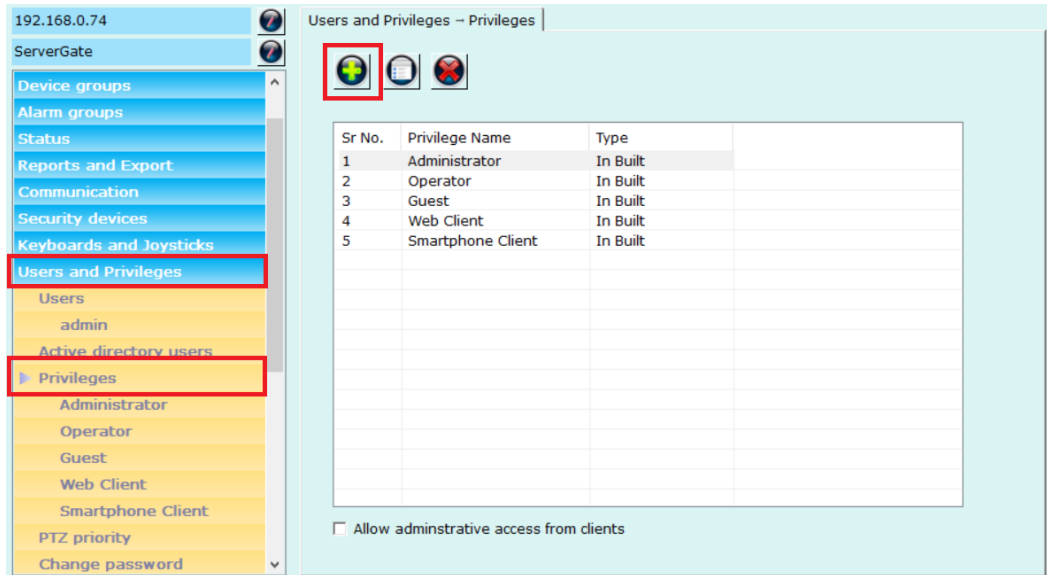

Sr No.	Privilege Name	Type	
1	Administrator	In Built	
2	Operator	In Built	
3	Guest	In Built	
4	Web Client	In Built	
5	Smartphone Client	In Built	

Allow administrative access from clients

To add new privilege, click on 'Add privilege...' button.

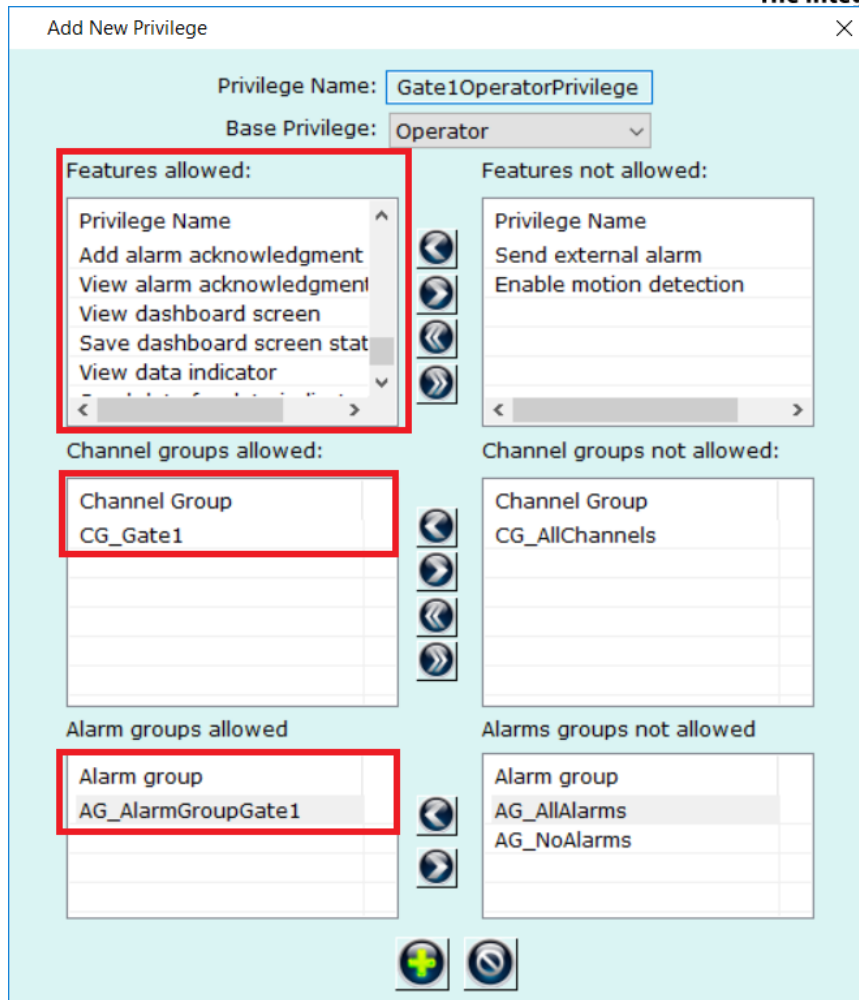

Type any text string for privilege name. We are using 'Gate1Operator' text string for this example.

Select 'Operator' option for 'Base Privilege'

'Feature allowed' list will show list of features which will be available to logged in user using this privilege.

Use feature selection buttons to move privileges to and from 'Feature allowed' and 'Features not allowed' lists.

Please ensure features are added to 'Features allowed' list as per requirement.

For example, we have excluded 'Send external alarm' and 'Enable motion detection' feature from this privilege. These features will not be available to user which login from client using this privilege credentials.

'Channel groups allowed' will show list of devices groups allowed to user logged in using this privilege.

Use device groups selection buttons to select device groups from 'Channel groups not allowed' and move them to 'Channel groups allowed' lists.

We have selected device group 'CG_Gate1' in this example.


'Alarms groups allowed' will show list of alarms groups allowed to user logged in using this privilege.

Use alarm group selection buttons to select alarm groups from 'Alarms groups not allowed list' and move them to 'Alarm groups allowed' list.

We have selected alarm group 'AG_AlarmGroupGate1' in this example.


Click on the 'Add' button to finish adding new privilege.

Privilege 'Gate1Operater' will be configured and added to server software as shown in image below.

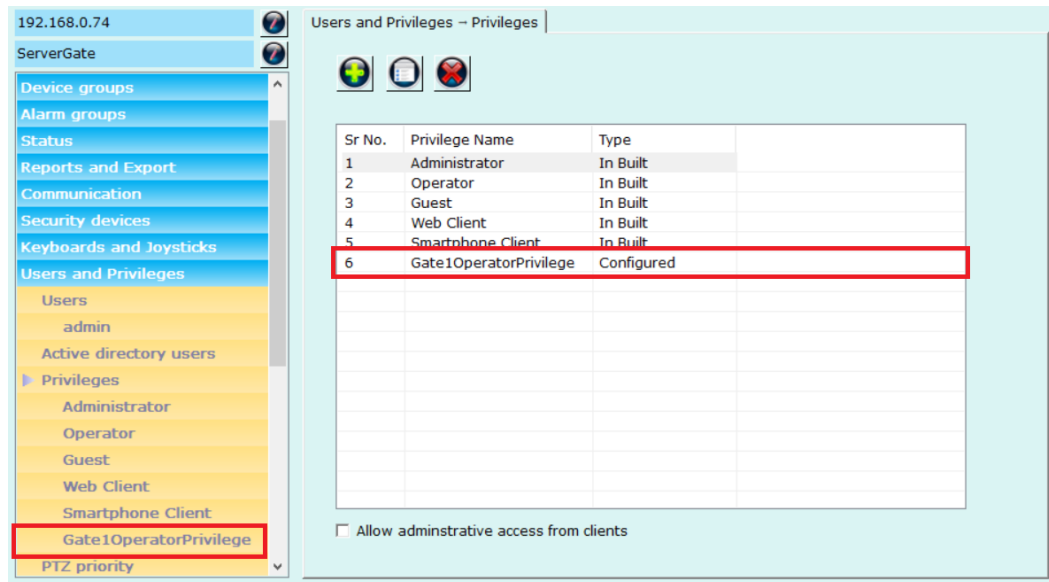

Configuring User

To configure new user, go to 'Users and Privileges' tab and 'Users' sub tab from left navigation menu bar.

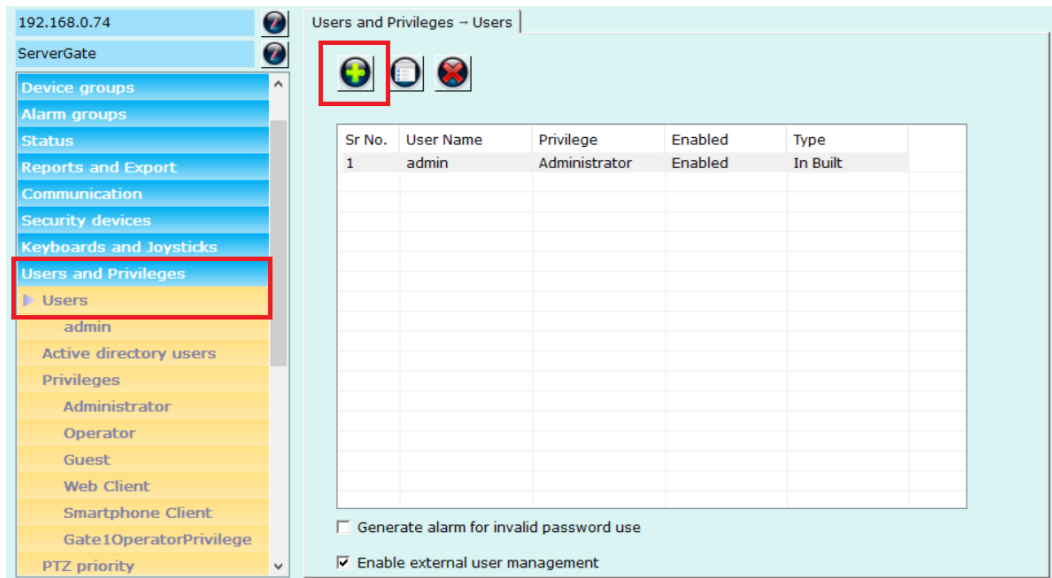

To add new user, click on 'Add new user...' button.

Add New User

User Name: Gate1Operator

Password: ●●

Confirm Password: ●●

Privilege: Gate1OperatorPrivile

Enable user

Address Line 1:

Address Line 2:

Phone No:

E-mail ID:

Type username and password. These can be any valid text strings.
Confirm the password

Select 'Privilege'. This should be the 'Operator' privilege or privilege derived from 'Operator' privilege.

We have selected 'Gate1OperatorPrivilege' which we have created in previous step.

Click on the 'Add' button to finish adding new user.

User 'Gate1Operator' will be configured and added to software as shown in image below.

