

Infinova® 2217 Security Management System Smartphone Client

For Smartphones, PDAs and other hand-held devices which use Windows Mobile 5.0 (or higher) Operating System

User Guide

July 2013

www.infinova.com



Contents

1. Login	3
2. Video View	5
3. Alarms View	6
4. Settings View	7
4. Configuring Smartphone Client User in Security Management System server Create a user with Smartphone Client Privilege Configure Channel groups for "Smartphone Client" privilege	8 8 10



1. Login

- (a) Go to 'Windows -> Programs' and tap on the 'SMS Smartphone Client' application.
- (b) The 'Login' screen will be displayed.

🎢 Login	🔃 📰 🏠 📢 06:54 🛛 ok
	IP Address : 169.254.2.2
	User Name : test
	Password : ****
	Login Cancel
	✓ Remember Login
	Port forwarding enabled at server
	Version : 13.04.26.01

- (c) Please type the IP address of the Security Management System server software. Please refer to the 'Security Management System Server – User Guide' document, 'Quick Start' section for details about how to locate the IP address of the server software.
- (d) Type valid 'User name' and 'Password'. This should match with the user configured in the server software, and the user should have the 'Smartphone Client' privilege. Please refer to the 'Security Management System Server User Guide' document, 'Quick Start' section for details on how to configure new user with 'Smartphone Client' privilege.

Important - Only users with 'Smartphone Client' privilege can login from the SmartPhone client applications. Please refer to the section 'Configuring Smartphone Client User in Security Management System server', available in this document, for steps to add and configure a user with 'Smartphone Client' privilege in the Security Management Server.

- (e) You can check "Remember Login" check box to remember login information for next session.
- (f) Tap on the 'Login' button. The application will connect to the Security Management System server application for authentication and login.



(g) After successful login, the main screen will be displayed. The main screen provides four views – 'Video view', 'Alarms view', 'Settings View' and 'About View'



2. Video View



The video view displays the live video streams for all video channels which are accessible to the logged in user.

User can navigate to other pages with page number hyperlinks on top or with the combo box for pages

Full Screen Video

User can tap on any of the videos on live view to view it in full screen mode.



Taping on the full screen video, will switch the user interface back to the video view with videos displayed in 2X2 grid .



3. Alarms View

Alarms view displays list of the alarms generated and processed by the Security Management System server application, along with the snapshot image for every alarm.

11 Lo	ogin	🔃 📰 🏠 📢 00:40	ok
Snapsh	ot	Type : Intrusion Camera ID : Reception 10-Nov-2011::15.30.15 Type : Loitering Camera ID : Exit Gate 1 9-Nov-2011::21.45.12 Type: Intrusion Camera ID : Reception '9-Nov-2011::22.12.23	
_			-
Videos	Alarms	Settings About	

The alarms list gets updated real-time, as a new alarm is generated and processed by the Security Management System server application. On receiving alarm a notification is shown to user if the setting is done.

🎢 Login	包 😂	🏠 ◀€ 00:44 🛛 ok
<u>1</u>)	
VC_Cam	Type : Intrusion	
UI	Source : VC_Cam037	
1	Time : 09-Jul-2013::11:05:20	D and a second sec
VC_Cam	Show Video Close	
1.01		-
Videos Aları		

Clicking on "Show Video" shows video view for the "Source" of alarm.



4. Settings View

n Login	🔃 🛟 🕌 00:46 🛛 ok
	Show Event Alert
	✓ Play Alert Sound For Events
	Save
Videos Alarm	Settings About
VIGEOS AIdTT	

Settings for event processing can be done from settings view.

Show Event Alert : Shows event alert whenever a new event is received

Play alert sound for events : Plays a sound alert when a new event is received



4. Configuring Smartphone Client User in Security Management System server

Create a user with Smartphone Client Privilege

• On Security Management System server, go to "Users" section under users and privileges

Site_5.4.13.44		Users and	Privileges -> Use	rs		
Video devices	^					
Channel Groups			E ×			
Status						
Security devices		Sr No.	. User Name	Privilege	Enabled	Туре
Jsers and Privileges		1	admin	Administrator	Enabled	In Built
Users		2	ор	testPrev	Enabled	Configured
admin						
ор						
Privileges						
Administrator	=					
Operator						
Guest						
Web Client						
Smartphone Client						
testPrev						
larm management						
Reports						
Data management						



• Click Add new User

Add New User	X
User Name	SmartPhoneUser
Password	: ••••
Confirm Password	: ••••
Privilege	Smartphone Client 👻
	🗹 Enable user
Address Line 1:	Address1
Address Line 2:	Address2
Phone No:	23345566
E-mail ID:	smartphoneuser@test.
	₽

- Fill in the required information and select the privilege as "Smartphone Client"
- Click OK



Configure Channel groups for "Smartphone Client" privilege

• Click on "Privilege" under users and privileges section

Site_5.4.13.44	Users and P	rivileges -> Privileges				
Video devices						
Channel Groups						
Status	c					
Security devices	Sr No.	Privilege Name	Туре			
Users and Privileges	1	Administrator	In Built			
Users	2	Operator	In Built			
admin	3	Guest	In Built			
	4	Web Client	In Built	_		
op	5	Smartphone Client	In Built			
Privileges	6	testPrev	Configured			
Administrator						
Operator						
Guest						
Web Client						
Smartphone Client						
testPrev						



- Select and edit "Smartphone Client" privilege
- Add required channel groups for this type of privilege

Users and Privileges ->	> Privileges	-> Smartphone	Client		
Privilege Name: Privilege Type:	Smartpho In Built	one Client			
Functions:					Led
 Playback view Alarm search Alarm view Change self pass Add video chann Remove video ch User manageme Autostart setting Recording setting 	sword nel nannel ent gs gs	 Add sequence Remove sequence Edit sequence Playback con Export video Network sette 	Settings can not be changed for the in-built privileges		
Channel groups allo	owed:		Channel groups not allow	ed:	
Channel Group			Channel Group		<u> </u>
CG_Group3		< 22 22 22 22 22 22 22 22 22 2	CG_AllChannels CG_Group2 CG_Group004		